


# BALT®

## CPU-WRITE

 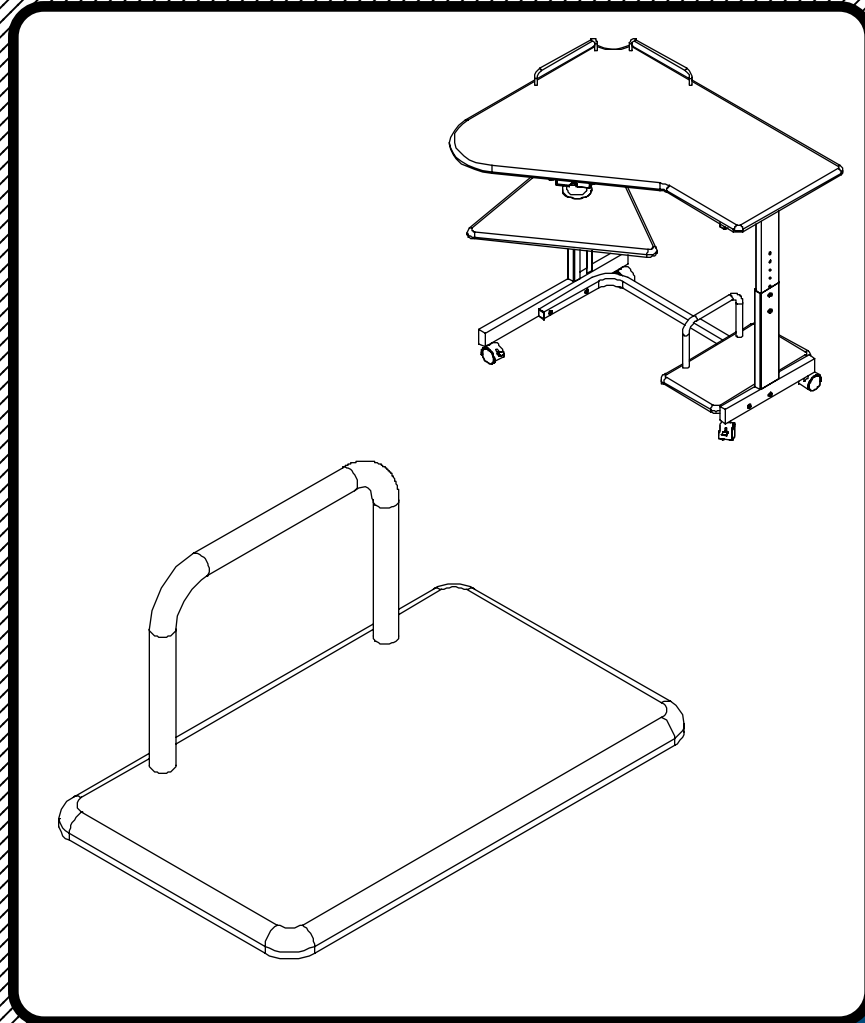


 
CPU Holder - WriteAngle Desk



# Assembly Instructions

# CPU-Write

## CPU Holder-WriteAngle Desk

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P1		CPU Platform	1 EA	<p style="text-align: center;"><b>Hardware List</b></p> <p>A  1-1/2" Socket Screw 5 EA</p> <p>B  Allen Wrench 1 EA</p>			
P2		CPU Support Rail	1 EA				

### Missing Parts or UPS Damaged Parts

For Your Convenience you can  
EMAIL us at

**[susanthompson@baltinc.com](mailto:susanthompson@baltinc.com)**

24HOURS 7 DAYS A WEEK

***Should you require assistance during assembly,  
please call our Customer Service Department***

***Monday - Friday 8 a.m. - 5 p.m.***

***Central Standard Time 1-800-749-2258***

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

# CPU-WRITE Assembly Diagram



1. Identify and Separate all the Parts and Hardware.

Attach CPU Support Rail (P-2) to CPU Platform (P-1) using 2 each screws (A) as shown in illustration #1.

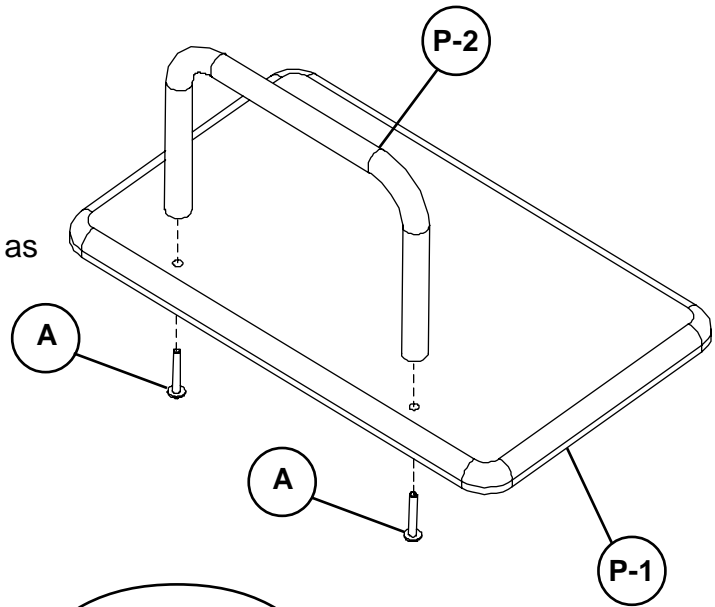


Illustration # 1

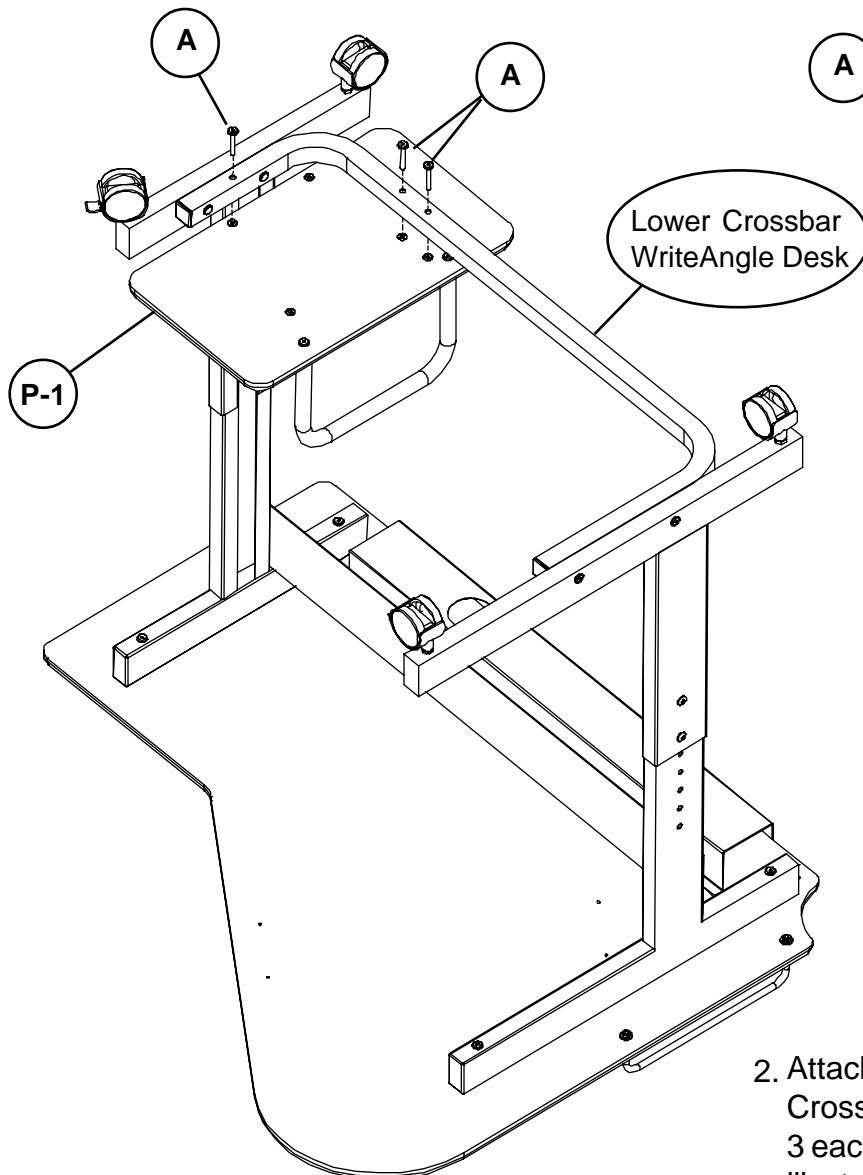


Illustration # 2

2. Attach CPU Platform (P-1) to Lower Crossbar of Write Angle Desk using 3 each screws (A) as shown in illustration #2.

*(Tighten all the screws at this time using Allen Wrench (B).)*