



A: attaches to underside of desk or keyboard shelf with 4 wood screws

B: to adjust the tension of the tilt tighten or loosen the 2 kep nuts on the side of the mounting bracket